

Auto Rear Seat Cover Installation Instructions

The following outlines how to install your new seat cover. This seat cover uses headrest or corner straps, a seat cushion strap, and two plastic post anchors to secure the cover in place.

Headrest and Corner Straps – the seat cover has two sets of straps with side-release buckles on each side (left and right). The inner straps are for attaching the cover to your vehicle's headrests. The outer straps are for slipping around the top corners of your vehicle's seat back. These outer straps are useful if your vehicle does not have headrests. To install, simply slip the inner straps over the headrests then slip the outer straps over the top corners of the seat back. Then loosely spread the seat cover down the seat back and across the seat bottom cushion.



Seat Cushion Strap – reach behind the seat cover midway down where the seat bottom and seat back meet to locate this strap. Slip this strap over the corner of the seat bottom cushion. Repeat for the opposite side. Then, starting from one corner, slip the strap down between the seat back and bottom all the way across the seat bottom. Be sure the strap extends down below the top edge of the seat bottom cushion.



Plastic Post Anchors - Now that the seat cover is attached to the headrests and has been slipped around the seat back and bottom cushions, tuck the seat cover in between the seam between the vehicle's seat back and seat bottom. Use material from the seat bottom portion of the cover so that the front seam aligns with the top of the car's seat bottom. Then insert the plastic posts in between the seat back and seat bottom to anchor the cover in place.



Adjust Straps – the final step is to adjust the headrest, corner and seat cushion straps to align and tighten the cover on the vehicle's rear seat. Use the side release buckles on the headrest and corners straps to align the top portion of the cover. Use the side release buckle on the front center of seat cushion strap to tighten this portion of the cover around the car's seat bottom as shown. It is not necessary to have the seat cushion strap extremely tight; just snug. Pulling this side release buckle with excessive force may cause the buckle to fail.



Your seat cover has now been successfully installed.